


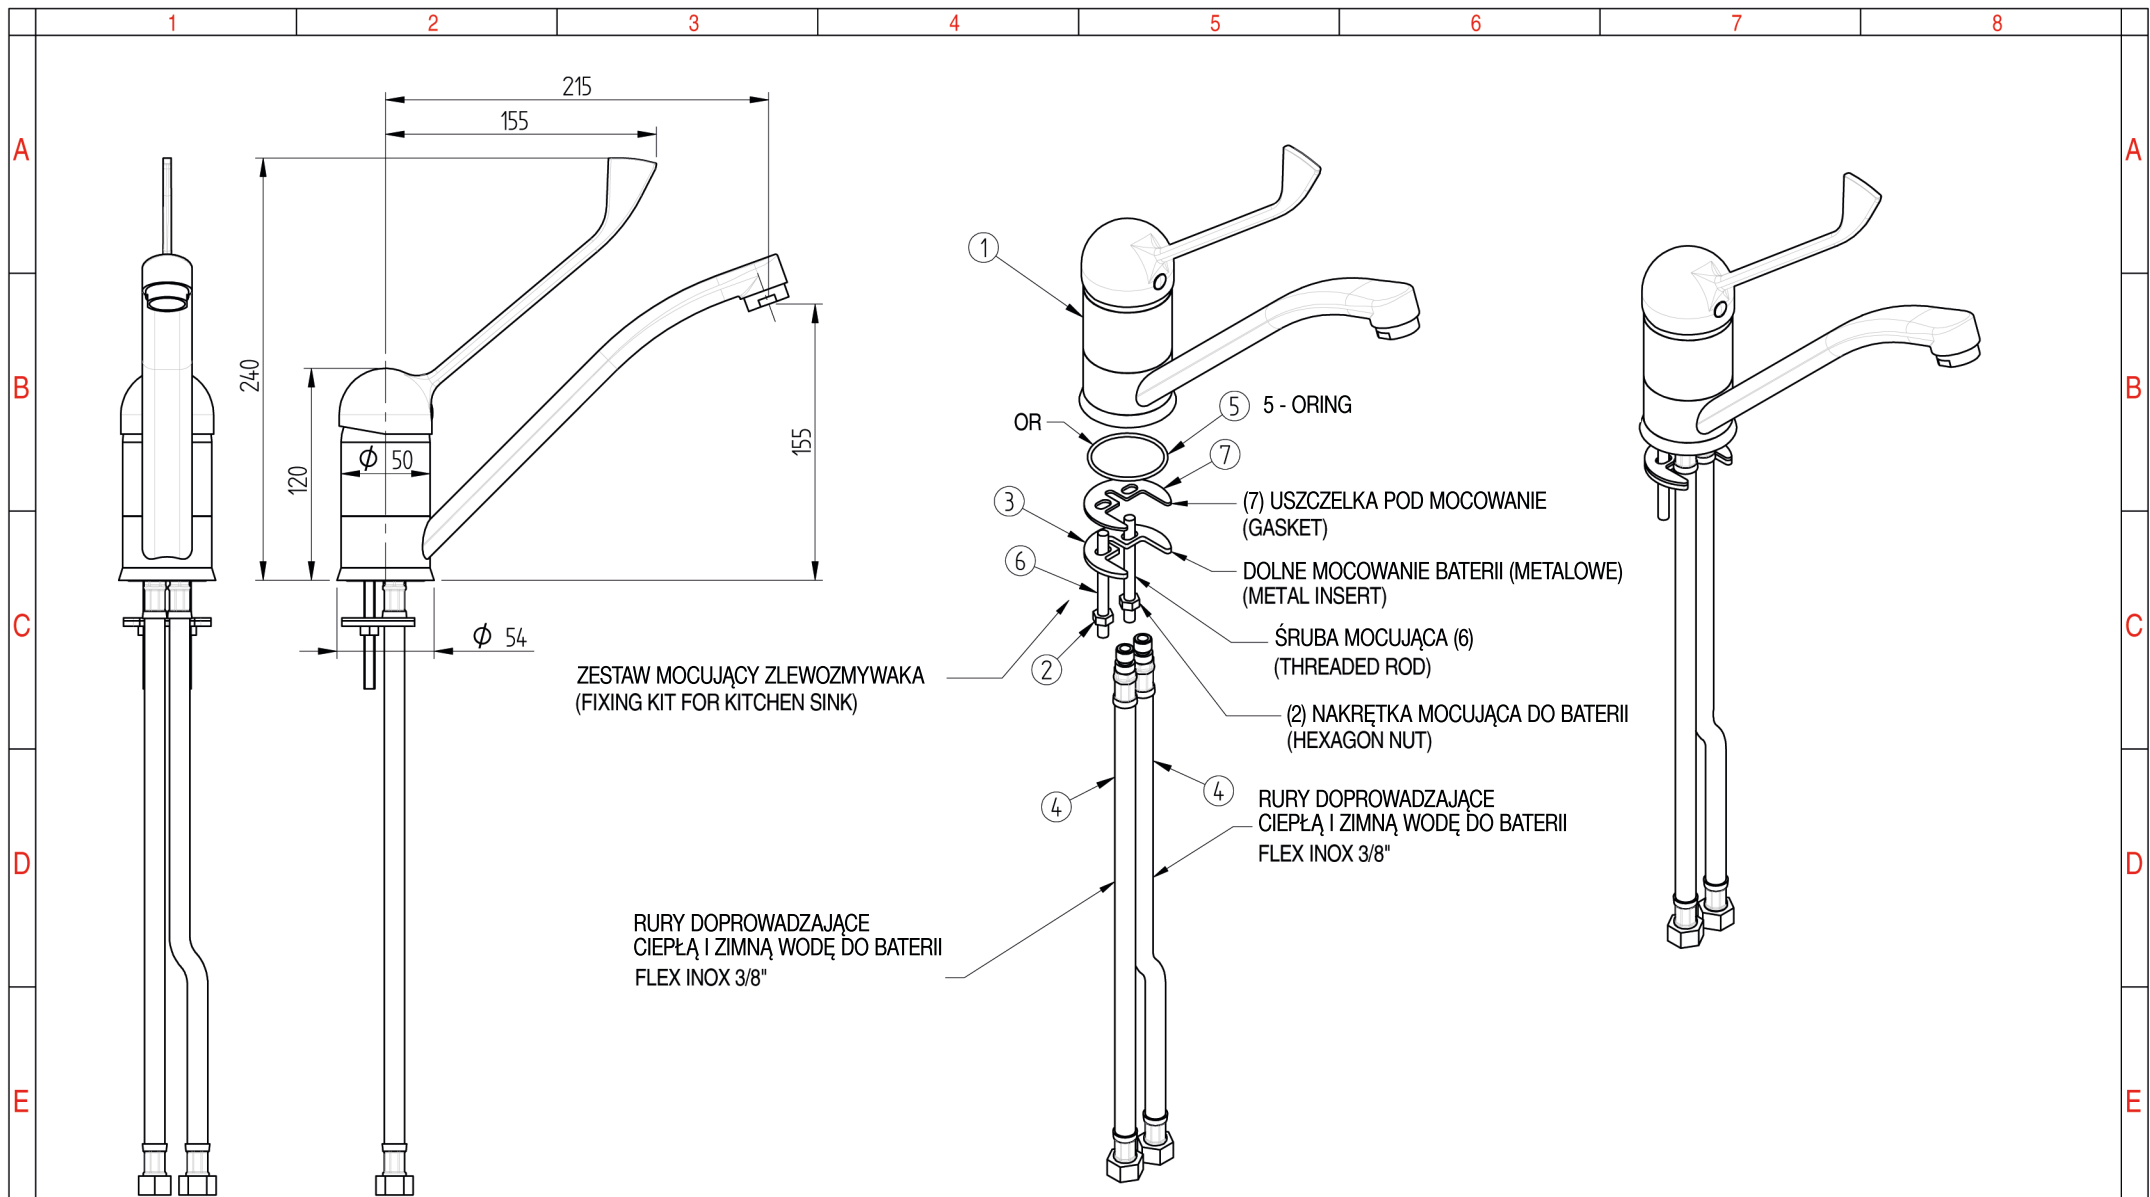

INSTALACJA:

- 1) Zdjąć zamontowany zawór (1) z pudełka
- 2) Włożyć zawór (1) do otworu $\phi 35$, pomijając oring (5)
- 3) Przymocować śruby mocujące do baterii (1) [...]
- 4) Przymocować baterię (1) do zlewu, umieszczając najpierw uszczelki pod mocowanie (7) poniżej zlewu, następnie dolne mocowanie baterii (3), następnie złączyć wszystko za pomocą nakrętek (2)
- 5) Podpiąć rury doprowadzające wodę (4) do baterii i podłączyć je do sieci wodnej
- 6) Należy się upewnić, że wszystkie elementy zostały tak zamontowane, by uniknąć ewentualnych wycieków

PRE-RINSE INSTALLATION:

- 1) take off the assembled tap (1) from the box
- 2) insert the assembled tap (1) into the hole $\phi 35$ made on the sink, leaving the OR gasket (5) in its place into the body tap
- 3) threaded rods (6) fixed into the body (1)
- 4) fix the tap (1) into the sink, first inserting the gasket (7) into the sink below, then the metal insert (3) then fixing everything with the hexagon nuts (2)
- 5) screw the flexibles (4) to the body tap (1) and connect them to the waternetwork
- 6) make sure that all components have been fixed in order to avoid leaks

970522



HENDI
FOOD SERVICE EQUIPMENT